

IPMI

Metrics List & Descriptions:

Technology /Category	Metric/Feature Name	Date Type	Format Example	Collectd Release	Collectd Plugin	Description	Dependencies	Limitations	Comments
IPMI	Fan Speed	Char & Int	None	5.8	ipmi	Reads multiple fan speed			Gets Metric from SDR.
IPMI	Air Flow	Char & Int	None	5.8	ipmi	Reads systemair flow data of system chassis			Gets Metric from SDR.
IPMI	Power Supply	Char & Int	None	5.8	ipmi	Read the power supply for the CPU			Gets Metric from SDR.
IPMI	Thermal Control	Char & Int	None	5.8	ipmi	Reads the Thermal Control percentage for CPU			Gets Metric from SDR.
IPMI	Temperature	Char & Int	None	5.8	ipmi	Reads temperature of different compenents in the base board			Gets Metric from SDR.
IPMI	Voltage	Char & Int	None	5.8	ipmi	Reads voltage on system board			Gets Metric from SDR.

Sub-sections:

- [IPMI plugin HLD](#)
- [IPMI Analog Sensors Executed Tests](#)
- [IPMI events executed tests](#)